

Center Speaker Bracket Installation Directions

Mounting the Center Speaker Bracket correctly takes a lot of thought and a lot of planning. Please read the directions thoroughly and plan out how the mount would be installed best for your use. Each Setup will be different and these directions can not account for every situation. Failure to do so may result in Damage, Injury, or Death. Dynamic Mounting is not responsible for any damage, injury, or death resulting from improper mounting or use of the Center Speaker Bracket.

These instructions are only a guide and the consumer is responsible for correct and secure mounting. The person installing the mount should be a competent person with experience mounting load bearing assemblies. For any questions or concerns, please contact Dynamic Mounting at Info1@DynamicMounting.com.

The Center Speaker Bracket is rated for a max load of 40 LBS attached to a Dynamic Mount, Do NOT exceed load rating of either.

Specifications

- Handles Center Speakers or Sound Bars up to 40 lbs attached to a Dynamic Mount.
- Works with tear drop or threaded holes spaced up to 33.6" apart.
- Shipping Dimensions: 30" x 4" x 4"
- Shipping Weight: 6.8 pounds Bracket Weight: 5.5 pounds

Consult your television's owner manual and TV mount manual before mounting it contains relevant information.

Tools Needed

- 3/8" and 7/16" box or open ended wrenchs. A ratcheting socket wrench makes the job easier
- Phillips Screw Driver
- A friend or 2, depending on how heavy your television/speaker setup is.

Parts Included

- 2 Vertical Support
- 2 Depth Support
- 1 Horizontal Support
- 2 Speaker Tab

Fasteners for Attaching the Bracket to the TV Mount (On the Vertical Support)

- 4 #10 Carriage Screw
- 4 Plastic Retain Washer
- 4 #10 Nuts

Fasteners for Bracket (On the Bracket)

- 10 1/4" Nuts
- 2 1/4" Carriage Screws

Fasteners for Attaching the Center Speaker to the Bracket (In the Plastic Bag)

- 2 #6 Hex Screw
- 2 #6 Flange Nut
- 2 1/4" x 3/4" Long Phillips Screw
- 2 M4 x 20mm Long Phillips Screw
- 2 M5 x 20mm Long Phillips Screw
- 2 M6 x 20mm Long Phillips Screw
- 4 Plastic Spacers
- 2 #10 Washers

Tools Included (In the Plastic Bag)

- 1 1/16" Hex L-Key
- 4 Adhesive Backed Rubber Bumpers

1. The Center Speaker Bracket is designed to attach a Center Speaker or Sound Bar to the TV Mount above or below a TV attached to a Dynamic Mount.
2. See Figure 1 for assembly details
3. It is recommended to layout the TV, Dynamic Mount, Speaker Bracket and Speaker on the floor before drilling holes in the wall.
4. If the Speaker is below the mount, the Mantel Clearances need to be measured to the bottom of the Speaker.

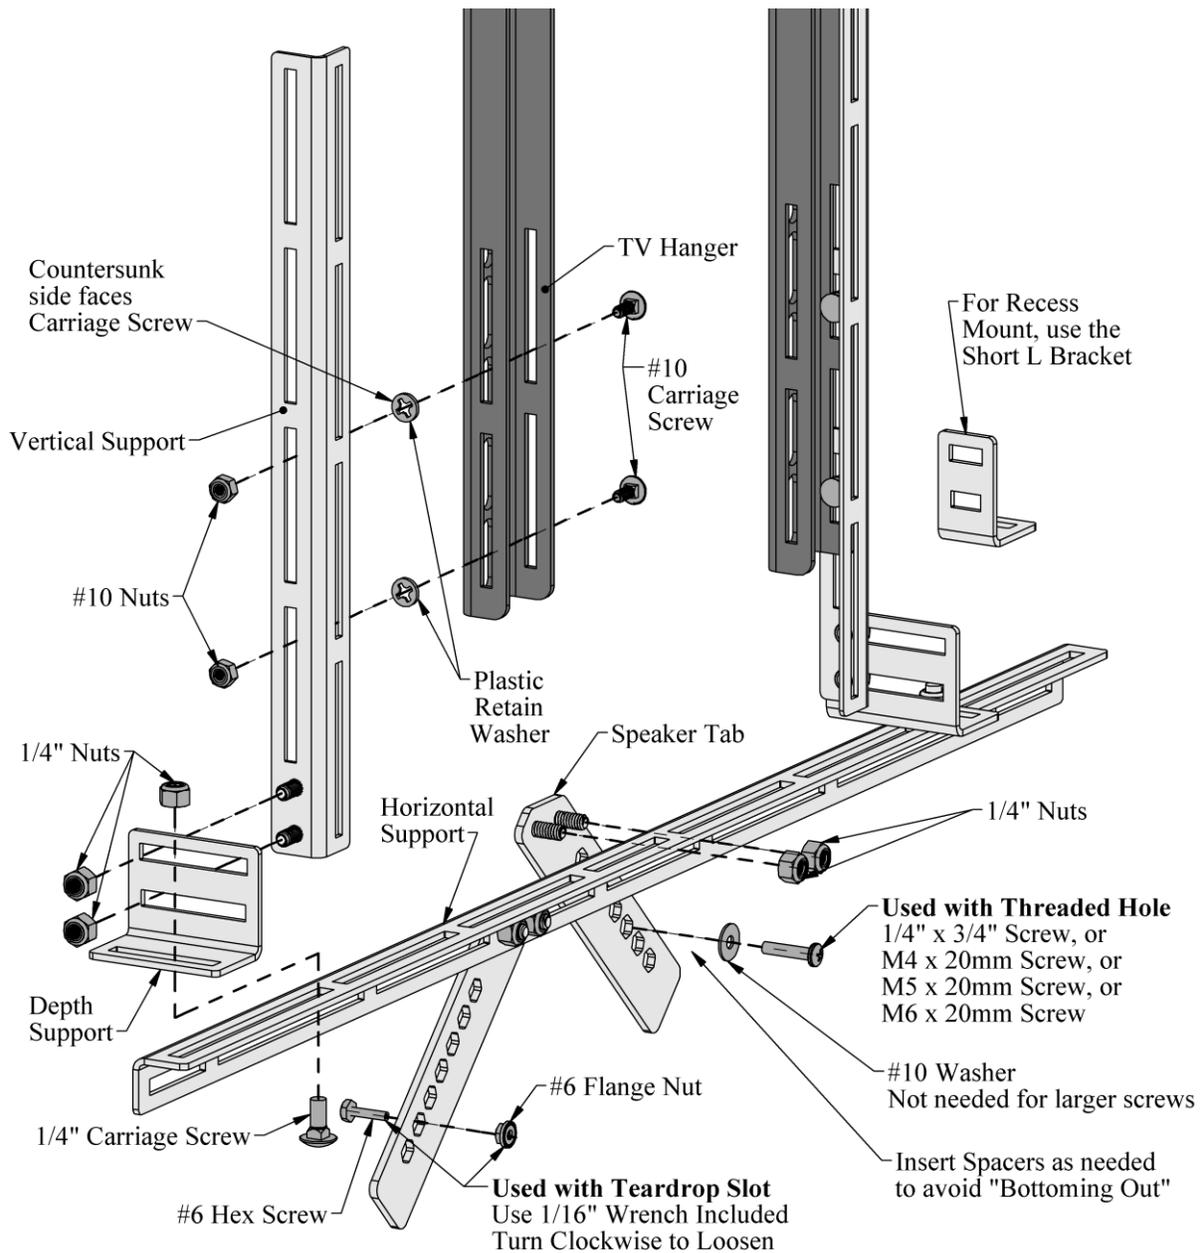


Figure 1 Setup for a Speaker Below the TV

Assembly

1. The Speaker Bracket has a lot of adjustment to account for most TV-speaker combinations; it will take careful planning to find the best setup for you.
2. The Depth Support comes attached to the Horizontal Support for the most common TV hole spacing of 400mm. It may have to be moved for different hole spacing
3. We recommend assembling the Vertical Supports on the TV Hanger, and putting everything else on the speaker on the ground.
4. Assembly and Adjusting would be much easier with 2 people.
5. To be able to lift the TV mount by grabbing the speaker. The top of the speaker needs to be butted against the bottom of the TV. Especially when attaching to a TearDrop Slot.

Attaching to Speaker

There are 2 options to attaching the speaker to the bracket;

1. The first and recommended if possible, is to use a Phillips head screw to thread directly into the back of the speaker. Use the #10 washer if it fits on the screw.
2. The Second is to use the #6 screw in the TearDrop Slot. Thread the #6 screw into the #6 Flange Nut a little ways and then hang the speaker on it. Use the Hex Key supplied to attach the speaker to the bracket (turn the screw counterclockwise to tighten). Double check that the connection is solid.

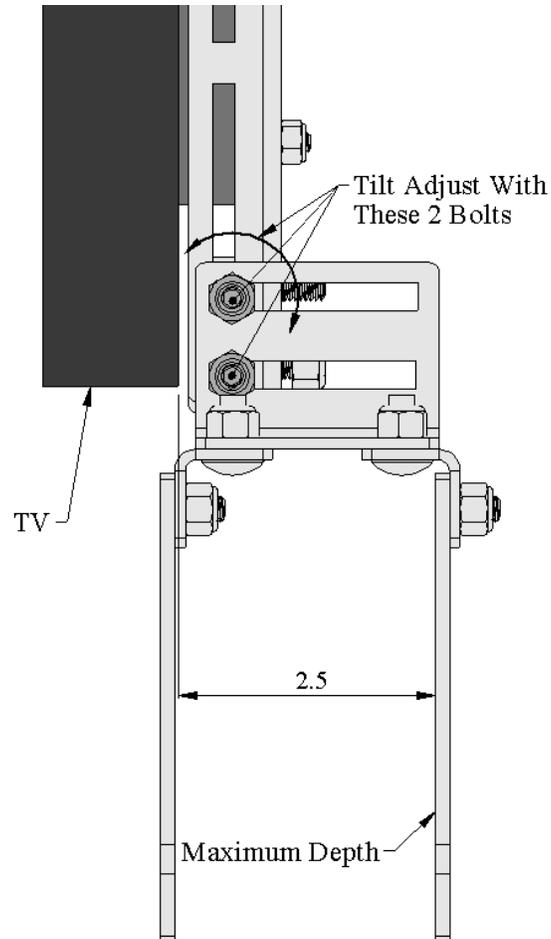


Figure 2 Depth Adjustment

Rubber Bumpers

The mount comes with adhesive backed rubber bumpers that you can use to put between the TV and speaker.

Using the Speaker to move the TV

- When the speaker is below the TV, the handle does not work. You can use the speaker to move the TV though. To be able to lift the TV mount by grabbing the speaker, the top of the speaker needs to be butted against the bottom of the TV. Especially when using the Tear Drop Slot to prevent the speaker from sliding off the #6 screw.

Warranty

Dynamic Mounting guarantees the Center Speaker Bracket to be free of defects for the product's warranty period of 5 years.

The warranty period begins on the original date of shipping. The limited warranty is intended only for the original purchaser. The warranty will be void if the bracket is modified in anyway or not installed correctly, Including overloading, abuse, or use for any purpose other than specified in these directions. The Center Speaker Bracket is for indoor use only and the warranty will be voided if they are used outdoors.

Dynamic Mounting is not liable for any damage or injury caused from the use of or the inability to use our bracket. To the maximum extent permitted by applicable law, Dynamic Mounting disclaims any responsibility for incidental or consequential damages.

Dynamic Mounting LLC, www.DynamicMounting.com
U.S. PATENT NO. 8724037, 9625091, www.DynamicMounting.com/patent